



one communications (網絡版 – 無線用戶) – 簡易手冊

類型	操作
撥打街線電話	(電話號碼) +  或  或 OK 鍵 貼士: 在號碼前不需要撥打 [9]
撥打內線號碼	(分機號碼) +  鍵
通話保留	保留: (通話中) + 按 [選項] -> [保持] 鍵 通話取回: 按 [恢復] 鍵
音量調節	提高音量: [右] 鍵 降低音量: [左] 鍵
重撥最近撥打號碼	按  鍵 +  鍵
快速撥打	按住: [2] ~ [9]
轉接來電	按  鍵 + (分機號) + [轉移] + (收線)
諮詢轉接	按  鍵 + (分機號) +  + 等待接聽 + [轉移] + (收線)
三方會話	按 [新通話] + (電話號碼) +  + 等待接聽 + [選項] + [會議]
所有來電轉駁	設定: [*][0][5] + (電話/分機號) +  取消: [#][0][5] + 
繁忙時來電轉駁	設定: [*][2][5] + (電話/分機號) +  取消: [#][2][5] + 
無人接聽時來電轉駁	設定: [*][3][5] + (電話/分機號) +  取消: [#][3][5] + 
來電待接	當嘟嘟聲響起時按  或 [接受] 鍵 設置/取消: [*][1][7] +  設置: [#][1][7] +  取消
組別來電待聽	[*][1][1] +  鍵 貼士: 你可以設定 *11 作為快速撥打號碼名為 "Group pick-up" 在 2-9 鍵上
來電待聽	按 [*][2][1] + (響鈴分機號) +  鍵
請勿打擾	設定: [*][0][1] +  取消: [#][0][1] + 
收聽留言	按 [*][9][0] +  鍵
收聽留言(辦公室以外)	從其他話機: (撥打22051111) + (自己話機號碼) + [#] + (自己語音郵箱密碼) + [#]
撥打收費電話	鎖定: [*][0][4] +  鍵, 系統提示輸入密碼, (密碼) + [#] 解鎖: [#][0][4] +  鍵, 系統提示輸入密碼, (密碼) + [#]
通訊錄	按 [下] 鍵 -> [Local Dir] or [Network Dir] 貼士: 舉例 你可以輸入 6453 快速搜尋聯繫人Mike
通話記錄	按 [記錄] 鍵 撥出號碼: 按  鍵

無線套餐話機型號: Yealink W52P, W52H

服務熱線: 1833 111