

one communications – Panasonic KX-NS700XE quick reference

Updated: March 2016

Features		Instructions
Dialing out		Lift the handset + [9] or [CO Button] + Phone no
Intercom dialing		Lift the handset + Ext no
Auto Callback		Press [6] while hearing a busy tone + Hang up
Call transfer		Press [Transfer] + Ext no + Hang up
Holding call		Press [HOLD]
Conferencing call (call connected)	- station conference	Press [CONF] + Ext no + [CONF]
	- line conference	Press [CONF] + [9] or [CO Button] + Phone no + [CONF]
Extension group pick-up	- group	Lift the handset + *40 + [Group no 01-32]
	- direct	Lift the handset + *41 + Ext no
System speed dialing		Lift the handset + [AUTO DIAL] + (000-999)
Station speed dialing	- to set	Lift the handset + *30 + (00-99) + 9 + Phone no + #
	- to dial	Lift the handset + [AUTO DIAL] + [*] + (00-99)
One touch dialing (for KX-DT543X only)	- to set phone no	Press [PROGRAM] + one touch key + 2 + 9 + Phone no + [STORE]
	- to set extension no	Press [PROGRAM] + one touch key + 1 + Ext no + [STORE]
	- to cancel	Press [PROGRAM] + one touch key + 2 + [STORE]
	- to exit setting	Press [Exit]
	- to dial	Press programmed one touch key
Paging	- Group Paging	Lift the handset + *33 + [Paging group no 01-31]
Internal Call forwarding FWD=*710	- all	Lift the handset + *710 + 2 + Ext no + #
	- busy or no answer	Lift the handset + *710 + 5 + Ext no + #
	- to cancel	Lift the handset + *710 + 0
Message waiting [#]	- to leave	Press [MESSAGE] (when the called extension is busy or does not answer)
	- to call back	Lift the handset + Press [MESSAGE]
	- to cancel	Lift the handset + *700 + Ext no

Note [#] : Message waiting is available on proprietary telephone only.

Service hotline number: **1833 111**

one communications help link http://www.pccwone.com/eng/new_version_help.html

Voice Mail Box and Email Reminder: Customer is recommended to clean up voice mail box and email regularly.