



Panasonic KX-TDA Key Telephone System - Quick Reference

Description	Operation
Outgoing Dialing	(Lift Up Handset) + [CO Button] + (Phone No.)
System Hold	(Speaking) + [HOLD]
	To Retrieve : Press the held line key
Exclusive Hold	(Speaking) + [HOLD][HOLD]
	To Retrieve : Press the held line key
Last No. Redial	(Lift Up Handset) + [REDIAL]
System Speed Dialing	To Store : [PROGRAM] + [*] [*] + (Password XXXX) + [0] [0] [1] + [ENTER]
(Display Phone Only)	+ (Code No. 000 - 999) + (9 + Phone No.) + [STORE] + [HOLD] + [EXIT]
	To Dial : [SP-PHONE] + [AUTO DIAL] + (Code No. 000 - 999)
Station Speed Dialing	To Store : [SP-PHONE]+[*][3][0]+(Code No. 00 - 09)+(9+Phone No.)+[#]+[SP-PHONE]
	To Dial : [SP-PHONE] + [AUTO DIAL] [*] + (Code No. 00 - 09)
One Touch Dialing	To Store : [PROGRAM] + [CO Button] + [2] + (9 + Phone No.) + [STORE] + [EXIT]
	To Dial : [SP-PHONE] + [CO Button]
Call Transfer	(Speaking) + [TRANSFER] + (Extension No.) + (Hang Up)
Multi - Line Conference	(Speaking) + [CONF] + [CO Button] + (Phone No.) + Wait for answer + [CONF]
Multi - Station Conference	(Speaking) + [CONF] + (Extension No.) + Wait for answer + [CONF]
Intercom Calling	Tone Calling : (Lift Up Handset) + (Extension No.)
	Voice Calling : (Lift Up Handset) + (Extension No.) + [*]
Intercom Call Forward	To Set : [SP-PHONE] + [*] [7] [1] [0] + (Code No.) + (Extension No.) + [#] + [SP-PHONE]
	To Cancel : [SP-PHONE] + [*] [7] [1] [0] + [0] + [SP-PHONE]
	(Code No. : 2. For All Calls 3. For Busy 4. For No Answer 5. For Busy/No Answer)
Direct Station Selection	To Set : [PROGRAM] + (CO Button) + [1] + (Extension No.) + [STORE] + [EXIT]
(DSS Key)	To Cancel : [PROGRAM] + (CO Button) + [2] + [STORE] + [EXIT]
Paging	(Lift Up Handset) + [*] [3] [3] + (Paging Group No. 01 - 31) + Announce
All Paging	(Lift Up Handset) + [*] [3] [3] [2] + Announce
Answering a Page	(Lift Up Handset) + [*] [4] [3]
Call Waiting	When hearing a busy tone + [1] + Do not hang-up, Wait for answer
(Intercom Call)	Answer at called Extension : While hearing a tone + [HOLD] + [Intercom Button]
	To Set : [SP-PHONE] + [*] [7] [3] [1] [1] + [SP-PHONE]
	To Cancel : [SP -PHONE] + [*] [7] [3] [1] [0] + [SP-PHONE]
Call Back Request	When hearing a busy tone + [6] + (Hang up)
(Intercom Call)	Answer at called Extension : While hearing a tone + (Lift Up Handset)
Message Waiting	When hearing a busy tone or No answer + [MESSAGE] + (Hand Up)
	Answer at called Extension : (Lift Up Handset) + [MESSAGE]
	Cancel at called Extension : (Lift Up Handset) + [*][7][0][0]+ (Your Extension No.) + (Hang Up)
Extension Group Pick-up	(Lift Up Handset) + [*] [4] [0] + (Pick-up Group No. 01 - 32)
Extension Direct Pick-up	(Lift Up Handset) + [*] [4] [1] + (Ringing Extension No.)
Do Not Disturb (DND)	To set : [SP-PHONE] + [*] [7] [1] [0] + [1] + [SP-PHONE]
	To cancel : [SP-PHONE]+[*][7][1][0]+[0]+[SP-PHONE]

Service Hotline Number: 1833 111