

# Panasonic KX-NS700 Keyline System

## **UNIFIED MESSAGING SYSTEM - QUICK REFERENCE**

The Voice Mail Extn No. :

# To Set Call Forward

All Call	- [ SP-PHONE ] + [ * ] [ 7 ] [ 1 ] [ 0 ] + [ 2 ] + Voice Mail Extn. No. + [ # ] + [ SP-PHONE ]
Busy	- [ SP-PHONE ] + [ * ] [ 7 ] [ 1 ] [ 0 ] + [ 3 ] + Voice Mail Extn. No. + [ # ] + [ SP-PHONE ]
No Answer	- [ SP-PHONE ] + [ * ] [ 7 ] [ 1 ] [ 0 ] + [ 4 ] + Voice Mail Extn. No. + [ # ] + [ SP-PHONE ]
Busy/No Answer	- [ SP-PHONE ] + [ * ] [ 7 ] [ 1 ] [ 0 ] + [ 5 ] + Voice Mail Extn. No. + [ # ] + [ SP-PHONE ]

# To Cancel Call Forward

- [SP-PHONE] + [\*][7][1][0] + [0] + [SP-PHONE]

#### To Change The Personal Greeting

- 1. Dial The Voice Mail Extn No.
- 2. Enter The Password Followed By A Pound Sign [ # ].
- 3. Press [4] For Mailbox Management.
- 4. Press [1] To Change The Personal Greeting.
- 5. To Select The Greeting Press [1] For No Answer Greeting.
  - Press [2] For Busy Greeting.
  - Press [3] For After Hours Greeting.
- 6. Press [1] To Start The Record.
- 7. Speak The Greeting After The Tone & Press [1] To End The Record.
- 8. Press [1] To Review.
- 9. Press [2] To Accept.
- 10. Hang Up The Phone To Exit.

#### To Change The Mailbox Password

- 1. Dial The Voice Mail Extn No.
- 2. Enter The Password Followed By A Pound Sign [ # ].
- 3. Press [4] For Mailbox Management.
- 4. Press [2] To Change The Password.
- 5. Announce The Old Password.
- 6. Press [1] To Set The New Mailbox Password.
- 7. Enter The Password (Max. 16 Digits ) And A Pound Sign [ # ].
- 8. Announce The New Password.
- 9. Press [2] To Accept.
- 10. Hang Up The Phone To Exit.

#### To Retrieve The Messages

- 1. Lift The Handset.
- 2. Dial The Voice Mail Extn No.
- 3. Enter The Password Followed By A Pound Sign [ # ].
- 4. Press [1] To Listen New Message, Press [3] To Listen Old Message.
- 5. After Listen The Messag Press [1] To Repeat This Message.
  - Press [2] To Play Next Message.
  - Press [3] To Erase This Message.
- 6. Hang Up The Phone To Exit.

## Accessing The Mailbox While Away From The Office

To access the Personal Mailbox, press [#][6] while the Personal Greeting plays. Enter the Personal Mailbox number ([\*] + Owned Extn No.) and Password combination and follow the voice prompts. If you have to hang up before the prompt is finished, press [#][9] to release.

#### Service Hotline Number: 1833111

